

## Quick Start Guide

INTERNET CONFERENCE STATION XI-N6



|   |           |
|---|-----------|
| <b>1 Product Overview</b>                                 | <b>3</b>  |
| 1.1 Introducing the IPEVO X1-N6 Conference Station        | 3         |
| 1.2 IPEVO X1-N6, Front to Back                            | 4         |
| 1.3 IPEVO X1-N6 Key Functions                             | 6         |
| 1.4 Teleconferencing with the IPEVO X1-N6                 | 6         |
| <b>2 Problem: Solution</b>                                | <b>7</b>  |
| The LED is turned off and I cannot hear the other person. | 7         |
| I cannot hear the other person.                           | 7         |
| I can hear the other person but he cannot hear me.        | 7         |
| <b>3 Warranty and Customer Service Information</b>        | <b>8</b>  |
| 3.1 Warranty Coverage Information                         | 8         |
| 3.2 What the Warranty Does Not Cover                      | 8         |
| 3.3 Limitation of Implied Warranties                      | 9         |
| 3.4 Return and Exchange Policy and Procedure              | 10        |
| <b>4 Product Specifications and System Requirements</b>   | <b>11</b> |
| 4.1 Package Contents                                      | 11        |
| 4.2 Specifications  | 11        |
| 4.3 System Requirements                                   | 11        |

 
# 1 PRODUCT OVERVIEW

## 1.1 Introducing the IPEVO X1-N6 Conference Station



The IPEVO X1-N6 Conference Station provides wideband sound quality in full duplex to meet the needs of professionals using comprehensive VoIP teleconferencing solutions. Hear and be heard clearly without the hassle of drivers using your enterprise teleconferencing solution, such as Avaya One-X, Cisco IP Communicator and Nortel MCS Client.

Our plug and play Conferencing Station can also be used for free conferencing using personal instant messenger applications such as Skype, Windows Live Messenger, Yahoo Messenger, iChat etc. Whether you're on a Mac or on a PC, conferencing with the IPEVO X1-N6 is as easy as plug and talk.


## 1.2 IPEVO X1-N6, Front to Back

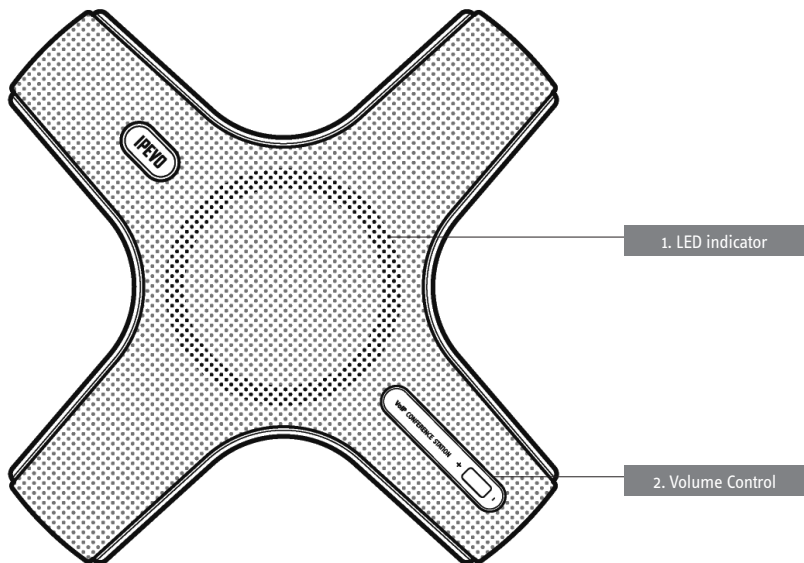

IPEVO X1-N6 Top View

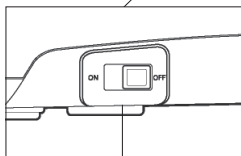  


 3. Power Switch

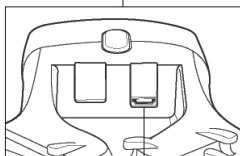

Bottom View

 4. USB Port

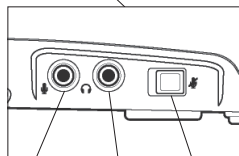

6. Mute Switch

5. Audio Jack - Input

5. Audio Jack - Output

IPEVO X1-N6 Side View

### 1.3 IPEVO X1-N6 Key Functions

1. LED indicator:  
Green - The IPEVO X1-N6 is on.  
Red - The IPEVO X1-N6 is muted.
2. Volume Control: 0 = Lowest to 9 = Highest
3. Power Switch: Slide it to the "ON" position to start using the IPEVO X1-N6. The LED indicator turns on (green).
4. USB Port: Connect the USB cable.
5. Audio Jack Input/Output: Connect a headset for private calls. While the headset is used, the IPEVO X1-N6's original microphone and speaker will be disabled.
6. Mute Switch: Toggle it to mute or unmute a conversation. When the Mute function is on, the LED indicator turns red; when the Mute function is off, the LED indicator turns back to green.

### 1.4 Teleconferencing with your IPEVO X1-N6

Follow the steps below to teleconference using your IPEVO X1-N6.

1. Launch your teleconferencing or chat application. If you do not have one, many applications are downloadable from the web such as Yahoo! Messenger, Window Live Messenger and Skype.
2. Connect the USB cable to your computer and turn the Power Switch on.
3. Make sure the IPEVO X1-N6 is selected as the audio input/output device in your computer.
4. Start talking.

**TIP:** When connecting your X1-N6, remember to adjust your computer's default microphone and speaker settings to the desired level. For optimal results, set both microphone and speaker settings in the mid-range.

*Note: You may mute the conversation at any time by sliding the Mute Switch on the side of your X1-N6. The center LED will turn red.*

## 2 PROBLEM: SOLUTION

### The LED is turned off and I cannot hear the other person.

The LED should turn green when the IPEVO X1-N6 is powered.

- a. Check that the IPEVO X1-N6 is turned on.
- b. Check that the USB cable is connected to both the IPEVO X1-N6 and your computer.

### I cannot hear the other person.

- a. Check that Volume Control is higher than 0. Try turning the volume up.
- b. Check your computer volume is not too low or muted.

### I can hear the other person but he cannot hear me.

- a. If the LED is red, the mute function is turned on. Toggle the Mute Switch on the side to turn it off.  
The LED will turn green.
- b. Check that the audio setting in your computer is not muted.
- c. Check that the audio setting in the application you are using is not muted.

## 3 WARRANTY AND CUSTOMER SERVICE INFORMATION

### 3.1 Warranty Coverage Information

IPEVO products come with a one year parts and labor limited warranty from the date of purchase as described below. Note that shipping and handling fees are not covered by this warranty.

This warranty is valid only for the first consumer purchaser in the original country of purchase. IPEVO warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, IPEVO will, at its sole option, repair or replace the product with a similar product. Replacement Product or parts may include remanufactured or refurbished parts or components. The replacement unit will be covered by the balance of the time remaining on the customer's original limited warranty. IPEVO provides no warranty for the third-party software included with the product or installed by the customer.

### 3.2 What the Warranty Does Not Cover

IPEVO retains the right to refuse warranty repair or exchange for reasons such as but not limited to those listed below:

Any product on which the serial number has been defaced, modified or removed.

Damage, deterioration or malfunction resulting from:

- Accident, misuse, neglect, fire, water, lightning, or other acts of nature
- Unauthorized product modification, or failure to follow instructions supplied with the product, including use of the product with non authorized programs.
- Repair or attempted repair by anyone not authorized by IPEVO.
- Damage to or loss of any programs, data or removable storage media.
- Software or data loss occurring during repair or replacement.
- Any damage of the product due to shipment.
- Removal or installation of the product.
- Causes external to the product, such as electric power fluctuations or failure.
- Use of supplies or parts not meeting IPEVO's specifications.









